


# Compass

## With 24 mountains for Feng Shui & General purpose

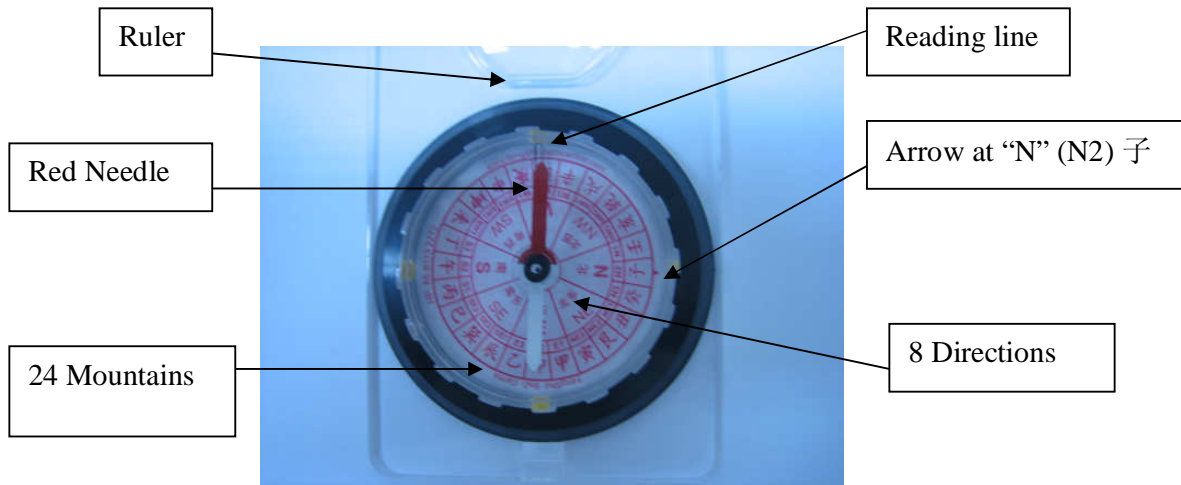

- Point the ruler to the direction of an object (e.g. a door or window) that you want to measure.
- The ruler must be parallel to the object of which the direction to be taken.
- Rotate the Capsule so that the Red needle of the compass points to the Arrow at “N” (N2) 子
- Your direction is the reading right under the “Reading line” of the ruler.
- The example shows that the direction you measure is at “W” (W2) 酉.
- The reading will be stayed there until your next measurement.

8 Directions	24 Directions	Mountains	Angle (Degree)
<b>North (N)</b> 北	N1	壬 (Ren)	337.5 – 352.5
	N2	子 (Zi)	352.5 – 7.5
	N3	癸 (Gui)	7.5 – 22.5
<b>North East (NE)</b> 东北	NE1	丑 (Chou)	22.5 – 37.5
	NE2	艮 (Gen)	37.5 – 52.5
	NE3	寅 (Yin)	52.5 – 67.5
<b>East (E)</b> 东	E1	甲 (Jia)	67.5 – 82.5
	E2	卯 (Mao)	82.5 – 97.5
	E3	乙 (Yi)	97.5 – 112.5
<b>South East (SE)</b> 东南	SE1	辰 (Chen)	112.5 – 127.5
	SE2	巽 (Xun)	127.5 – 142.5
	SE3	巳 (Si)	142.5 – 157.5
<b>South (S)</b> 南	S1	丙 (Bing)	157.5 – 172.5
	S2	午 (Wu)	172.5 – 187.5
	S3	丁 (Ding)	187.5 – 202.5
<b>South West (SW)</b> 西南	SW1	未 (Wei)	202.5 – 217.5
	SW2	坤 (Kun)	217.5 – 232.5
	SW3	申 (Shen)	232.5 – 247.5
<b>West (W)</b> 西	W1	庚 (Geng)	247.5 – 262.5
	W2	酉 (You)	262.5 – 277.5
	W3	辛 (Xin)	277.5 – 292.5
<b>North West (NW)</b> 西北	NW1	戌 (Xu)	292.5 – 307.5
	NW2	乾 (Qian)	307.5 – 322.5
	NW3	亥 (Hai)	322.5 – 337.5